

◆ TAD Walk-In and Truck-In Ovens

Designed for industrial process versatility and dependability



Despatch TAD Truck-in/Walk-in ovens feature horizontal recirculating airflow to ensure uniform temperatures throughout the oven. A high-volume fan circulates air through perforated, aluminized steel walls to create a constant horizontal airflow across all sections of the oven. The result is proven reliability in demanding production applications, such as aging, bonding, curing, drying, finish baking and heat treating. Multiple temperature operations are controlled by up to eight programs, with eight ramp and soak segments in each program.

The TAD is equipped with standard digital controls to regulate temperatures within tight tolerances and provides high limit protection. For more advanced control choose the optional Protocol 3™ microprocessor-based temperature and hi-limit controller with large LCD display and real time clock for auto start capability. Data-logging functionality enables reporting and analyzing and data files can be exported via the controller's USB port.

FEATURES AT A GLANCE

- ◆ Temperatures up to 343°C (650°F)
- ◆ Fully assembled and factory tested
- ◆ High limit over-temperature protection
- ◆ Digital control with 3/4" (1.9cm) LED display
- ◆ Audible high-limit alarm
- ◆ Two-inch test access port
- ◆ Aluminized steel interior
- ◆ Disconnect switch
- ◆ High volume recirculating fan provides faster, more uniform heating - saving process time and improving product quality
- ◆ Plate floor with truck tracks
- ◆ UL and C-UL listed open industrial control panel

OPTIONS

- ◆ Protocol 3™ control with integrated data logging capabilities and USB port for simple oven set-up and data export
- ◆ Insulated floor with truck tracks
- ◆ Despatch unique adjustable louvers
- ◆ Loading trucks and shelves
- ◆ Proportioning gas fired heater
- ◆ Chart recorder
- ◆ Rear doors
- ◆ CE compliant



Shown with optional Protocol 3 controller


TAD	2-52	3-10	3-21
-----	------	------	------

PHYSICAL SPECIFICATIONS			
-------------------------	--	--	--

Chamber size (width x depth x height)	38 x 38 x 63 in. 96 x 96 x 160 cm	48 x 52 x 72 in. 122 x 132 x 183 cm	72 x 72 x 72 in. 183 x 183 x 183 cm
Capacity in cubic feet (liters)	52.6 (1490)	104 (2945)	216 (6116)
Overall size (width x depth x height)	83 x 48.5 x 95 in. 212 x 123 x 241 cm	100.5x62.5x102 in. 255 x 159 x 259 cm	126.5x85.5x102 in. 321 x 217 x 259 cm
Electrical: 480 volts, 60 hertz - 3 phase (FLA- approx. full load amps) (50 hertz also available)	32.8 FLA / 24 kW	51 FLA / 36 kW	71.2 FLA / 48 kW
Exhaust outlet	7 in. (17.8 cm)	7 in. (17.8 cm)	9 in. (22.9 cm)
Doors	1	2	2
Insulation thickness	Walls: 5 in. (12.7 cm) Insulated floor option: 3 in. (7.6 cm) for all models		
Truck centers	24 in. (61 cm)	32 in. (81.3 cm)	48 in. (122 cm)
Approximate net weight	1850 lbs (844 kg)	3020 lbs (1377 kg)	5150 lbs (2336 kg)
Approximate domestic shipping weight (export adds weight)	2050 lbs (930 kg)	3220 lbs (1461 kg)	5400 lbs (2450 kg)

FUNCTIONAL SPECIFICATIONS			
---------------------------	--	--	--

Time to temp with no load 40° C to 177° C (104° F to 350° F)	15 minutes	15 minutes	15 minutes
Time to temp with no load 40° C to 260° C (104° F to 500° F)	30 minutes	30 minutes	30 minutes
Time to temp with no load 40° C to 343° C (104° F to 650° F)	50 minutes	50 minutes	50 minutes
Temperature uniformity at set point	+/- 1.5% after stabilization		
Minimum operating temp	40° C (104° F)	40° C (104° F)	40° C (104° F)
Maximum Operating Temperature	343° C (650° F)		
Recirculating fan	2 HP / 1700 CFM (802 l/s)	5 HP / 3800 CFM (1793 l/s)	10 HP / 6000 CFM (2832 l/s)
Control stability	+/- 0.5° C on all models		

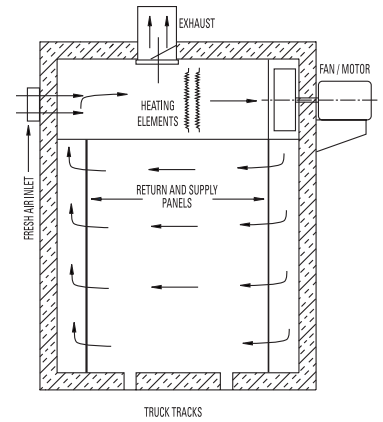

TAD front view cross section showing airflow pattern.

Notes: Design uniformity figures are based on a nine-point test conducted in an empty oven after stabilization period. Minimum operating temperature and cooling times are based on 20°C ambient temperature measured at the fresh air inlet. Specifications are subject to change without notice. If the existing specifications differ from yours, ask about our customizing capabilities.

TAD models are not to be used with flammable solvents, materials or containers. If your process involves flammable solvents please inquire about our TFD models.

SERVICE AND TECHNICAL SUPPORT

service phone: 1-800-737-8110
service international: 1-573-317-3054

dspsupport@itweae.com
parts@itweae.com

GLOBAL HEADQUARTERS

main phone: 1-800-726-0110
international/main: 1-952-469-5424
sales: 1-800-726-0550
international/sales: 1-952-469-8240
sales@despatch.com

WWW.DESPATCH.COM

8860 207th Street West
Minneapolis, MN 55044 USA

Despatch
Thermal Processing Technology **ITW EAE**