


◆ PBC Burn-In Oven

Designed for Multiple Burn-In Applications

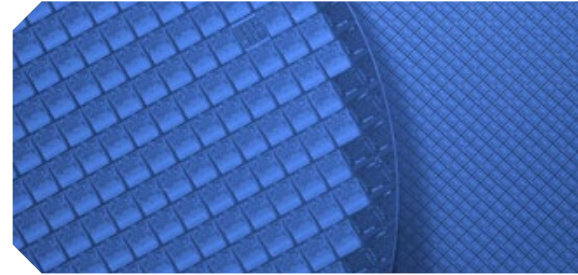

Despatch burn-in ovens are engineered specifically for applications such as high dissipation forward bias, high-temperature reverse bias, dynamic and static burn-in of IC, RAM, ROM, microprocessors and other semiconductor devices.

FEATURES AT A GLANCE

- ◆ High volume recirculating fans maintain consistent, uniform temperatures required by MIL STD 883D while removing heat generated by the load.
- ◆ Rear wall is easily disassembled and removed to simplify fixturing of power leads or feed-through boards into oven.
- ◆ Traditional horizontal loading. Side to side horizontal airflow provides uniform atmosphere flow across horizontally positioned loads.
- ◆ Over-temperature protection control monitors maximum temperature and shuts off heater if setpoint is exceeded.
- ◆ Easy-to-use temperature controller featuring user-friendly arrow buttons for changing setpoints. The controller also contains programmable EZ-Keys enabling simple one-touch operation of repetitive user activities.
- ◆ Controller communication includes EIA 232/485 Modbus® RTU and supports network connectivity to a PC or PLC.

MODEL OPTIONS

- ◆ Size: 18 cu ft (510 liter)
- ◆ Maximum Temperature 260°C (500°F)
- ◆ High Dissipation Capacity



OPTIONS

- ◆ Power supply cabinet is a standard E.I.A. 19" (48 cm) cabinet and aesthetically matches the oven. 78" (198 cm) usable opening height.
- ◆ Increased dissipation allows increase in live load capacity without risking over temperature.
- ◆ Circular chart recorder provides seven-day permanent record of process temperatures.
- ◆ Automatic damper controls amount of incoming fresh air while saving energy.
- ◆ Rapid cool-down provides faster cycle times.
- ◆ Back up/Redundant Hi-Limit to provide temperature protection in the event the primary device fails.
- ◆ Door switch to de-energize the heater and fan when the chamber access door is opened.
- ◆ Access port at rear of oven for test connections.
- ◆ Casters on bottom of unit for mobility.

BURN-IN OVENS

PBC2-18

SPECIFICATIONS

Atmosphere	Air
Capacity in cubic feet (liters)	18 (510)
Electrical	208, 230, 460/3/60 220, 380, 415/3/50
Time to temperature (25°C-125°C)	6 min.
Recovery time to 125°C (door open 1 min.)	1 min.
Temperature uniformity @ 125°C (empty oven)	±1°C
Operating range ¹	50°C - 260°C
Recirculating fan (CFM)	2600 (1227 LPS) (3200 option (1510 LPS))
Recirculating fan motor (HP)	3 (5 option)
Heater (kW)	12
Maximum dissipation ^{2,3} @ 125°C	6500 watts (7500 option)
Exhaust outlet diameter	8 in (20.3 cm)
Approximate chamber dimensions	26 x 24 x 48 in 66 x 61 x 122 cm
Outside dimensions	45 x 35 x 87 in 114 x 89 x 221 cm
Shipping weight (lbs/kg)	1425 lbs / 646 kg



Notes:

1 Assumes ambient of 25°C. Minimum temperature will be slightly higher with increased recirculating fan option.

2 Dissipation is reduced by 17% on 50 Hz. (Option available for full rated dissipation).

3 Live load evenly distributed provides maximum of 6°C mean temperature gradient.

SERVICE AND TECHNICAL SUPPORT

service parts: 1-800-473-7373

international service/main: 1-952-469-8230

service fax: 1-952-469-8193

service@despatch.com

GLOBAL HEADQUARTERS

phone: 1-888-DESPATCH (1-888-337-7282)

international/main: 1-952-469-5424

fax: 1-952-469-4513

sales@despatch.com

www.despatch.com

8860 207th Street West
Minneapolis, MN 55044 USA

Despatch
INDUSTRIES