

### ◆ TAD Walk-In and Truck-In Ovens

Designed for industrial process versatility and dependability



Despatch TAD Truck-in/Walk-in ovens feature horizontal recirculating airflow to ensure uniform temperatures throughout the oven. A high-volume fan circulates air through perforated, aluminized steel walls to create a constant horizontal airflow across all sections of the oven. The result is proven reliability in demanding production applications, such as aging, bonding, curing, drying, finish baking and heat treating. Multiple temperature operations are controlled by up to eight programs, with eight ramp and soak segments in each program.

The TAD is equipped with the Protocol 3™ microprocessor-based temperature and hi-limit controller with large LCD display and real time clock for auto start capability. Data-logging functionality enables reporting and analyzing and data files can be exported via the controller's USB port.

#### OPTIONS

- ◆ Insulated floor with truck tracks
- ◆ Despatch unique adjustable louvers
- ◆ Loading trucks and shelves
- ◆ Proportioning gas fired heater
- ◆ Chart recorder
- ◆ Rear doors
- ◆ CE compliant

#### FEATURES AT A GLANCE

- ◆ Temperatures up to 343°C (650°F)
- ◆ Fully assembled and factory tested
- ◆ Protocol 3™ control with large LCD display, integrated data logging capabilities and USB port for simple oven set-up and data export
- ◆ Audible high-limit alarm
- ◆ Two-inch test access port
- ◆ Aluminized steel interior
- ◆ Disconnect switch
- ◆ High volume recirculating fan provides faster, more uniform heating - saving process time and improving product quality
- ◆ Plate floor with truck tracks
- ◆ UL and C-UL listed open industrial control panel




TAD	2-52	3-10	3-21
-----	------	------	------

PHYSICAL SPECIFICATIONS			
-------------------------	--	--	--

Chamber size (width x depth x height)	38 x 38 x 63 in. 96.5 x 96.5 x 160 cm	48 x 52 x 72 in. 122 x 132 x 183 cm	72 x 72 x 72 in. 183 x 183 x 183 cm
Capacity in cubic feet (liters)	52.6 (1490)	104 (2945)	216 (6116)
Overall size (width x depth x height)	83.3 x 48.5 x 95 in. 212 x 123 x 241 cm	100.5x62.5x102 in. 255 x 159 x 259 cm	126.5x85.5x102 in. 321 x 217 x 259 cm
Electrical: 60 hertz - 3 phase <i>(FLA- approx. full load amps) 50 hertz is also available</i>	240 volts	65.9 FLA / 24 kW	140.2 FLA / 48 kW
	480 volts	32.8 FLA / 24 kW	71.2 FLA / 48 kW
Exhaust outlet	7 in. (17.8 cm)	7 in. (17.8 cm)	9 in. (22.9 cm)
Doors	1	2	2
Insulation thickness	Walls: 5 in. (12.7 cm) Insulated floor option: 3 in. (7.6 cm) for all models		
Truck centers	24 in. (61 cm)	32 in. (81.3 cm)	48 in. (122 cm)
Approximate net weight	1850 lbs (844 kg)	3020 lbs (1377 kg)	5150 lbs (2336 kg)
Approximate shipping weight	2050 lbs (930 kg)	3220 lbs (1461 kg)	5400 lbs (2450 kg)

FUNCTIONAL SPECIFICATIONS			
---------------------------	--	--	--

Time to temp with no load 40° C to 177° C (104° F to 350° F)	15 minutes	15 minutes	15 minutes
Time to temp with no load 40° C to 260° C (104° F to 500° F)	30 minutes	30 minutes	30 minutes
Time to temp with no load 40° C to 343° C (104° F to 650° F)	50 minutes	50 minutes	50 minutes
Temperature uniformity at set point	+/- 1.5% after stabilization		
Minimum operating temp	40° C (104° F)	40° C (104° F)	40° C (104° F)
Maximum Operating Temperature	343° C (650° F)		
Recirculating fan	2 HP / 1700 CFM (802 l/s)	5 HP / 3800 CFM (1793 l/s)	10 HP / 6000 CFM (2832 l/s)
Control stability	+/- 0.5° C on all models		

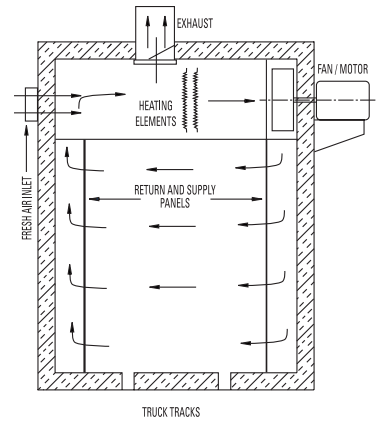

**TAD front view cross section showing airflow pattern.**

Notes: Uniformity figures are based on a nine-point test conducted in an empty oven after stabilization period. Uniformity can vary slightly depending on unit and operating conditions. Minimum operating temperature and cooling times are based on 20° C ambient temperature measured at the fresh air inlet with the fresh air and exhaust dampers fully open. Specifications are subject to change without notice. If the existing specifications differ from yours, ask about our customizing capabilities.

**TAD models are not to be used with flammable solvents, materials or containers. If your process involves flammable solvents please inquire about our TFD models.**

### SERVICE AND TECHNICAL SUPPORT

service parts: 1-800-473-7373  
international service/main: 1-952-469-8230  
service fax: 1-952-469-8193  
service@despatch.com  
usparts@itweae.com

### GLOBAL HEADQUARTERS

main phone: 1-800-726-0110  
international/main: 1-952-469-5424  
sales: 1-800-726-0550  
international/sales: 1-952-469-8240  
sales@despatch.com

### WWW.DESPATCH.COM

8860 207th Street West  
Minneapolis, MN 55044 USA

